

Assembly Guide & Mounting Instructions

CC VECTOR
CC Vector RV Long Range WiFi Receiver System

C. CRANE



CC Vector WiFi Repeater

USB Port

Use Main USB Connector



Leave secondary USB unplugged



Add Silicone Grease to this Connection for Additional Weather Protection

Plug In

CC X Mile Outdoor WiFi Receiver

Mount Vertically



Weatherproofing

①

Before connecting the CC X Mile to the antenna, coat the threads of the antenna with the supplied silicone grease.

This will help protect the threads from rust and water incursion.



NOTE: The 8dBi Antenna is shown, however the 15dBi Antenna is attached in the same way.

②

Once the antenna is securely screwed onto the CC X Mile, use the supplied coaxial seal to completely cover the connection.

We also recommend coating the USB connection with silicone grease and wrapping with the supplied coaxial seal for added protection.



Mounting Instructions



Mount antenna to pole (not supplied) using the two supplied U-Bolts.

Note:
Mount the antenna vertically

Antenna Safety Instructions



Before Use

Please read these IMPORTANT SAFETY WARNINGS before use.
It is important to read and understand all instructions.

Lightning

You may need to ground your antenna if you live in an area prone to lightning.

Power Lines

Never mount an antenna near power lines. If a power line comes into contact with your antenna, DO NOT TRY TO REMOVE IT. Call your local power company.

Wind

Installing an antenna on windy days can be dangerous. Slight winds can create strong forces against the antenna equipment.

If you have doubts about your ability to install your antenna safely, please hire a licensed, bonded professional to do the work.
C. Crane is not responsible or liable for damage or injury resulting from antenna installations.