


## Usage Tips

- Setup devices to the CC Vector without entering a password. Press the WPS button when prompted by your device to connect.

**WPS Button**

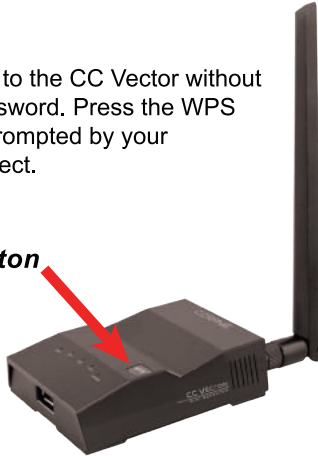

- For best performance we recommend 5 to 15 feet of separation between the CC Vector and the USB antenna.
- In some cases you may receive faster WiFi by rotating the USB Antenna horizontally, making sure to aim the broad side towards the distant WiFi network.
- It is normal to receive some speed reduction when repeating a wifi network. Connecting to the CC Vector directly with a network cable will help maintain the fastest speed.

## For More Speed Connect a WiFi Router – (Not required)

WiFi speed is variable and depends on distance and other conditions. The CC Vector provides enough speed for browsing the internet with several devices or streaming video on one device. To give you about double the WiFi speed on all your devices connect a WiFi router (not included) to the LAN port of the CC Vector.

- 1) Setup the CC Vector normally using the included directions.
- 2) Confirm that the CC Vector is working by browsing the internet while wirelessly connected to it.

**Back of CC Vector**



**LAN Port**

**Wireless Router**



**Internet or WAN Port**

- 3) Connect the included 18" network cable (or use your own longer network cable) to the LAN port of the CC Vector.
- 4) Connect the other end of the network cable to the "Internet" or "WAN" port on the back of your WiFi Router.
- 5) Test the setup by wirelessly connecting your computer or other device to the router's WiFi signal and browse the internet.