

Caution



1. Do not insert the device into your computer until the procedures in "Install Driver & Utility" has been performed.
2. This Quick Installation is meant to help you install the product quickly and easily. For detailed instructions on installation, configuration, and further setup options please consult the User Manual.

STEP 1

Install Driver & Utility

1. Exit all Windows programs. Insert the CD-ROM into the CD-ROM drive of your computer.

2. If the CD-ROM does not launch automatically, go to your CD-ROM drive (i.e., drive D:\), and double click on **Setup.exe**

3. When the Welcome screen appears, click **Next** to continue.



4. The Choose Destination Location screen will show you the default destination chosen by the utility. Click **Next** to continue.



5. Follow the instructions to select the program folder. Click **Next** to continue.



6. Select **Yes, I want to restart my computer now** and then click **Finish** to complete the software installation.



STEP 2

Connecting the Wireless Adapter

1. Locate your USB host and insert the USB Adapter
2. Once the device has been inserted to your computer, Windows will detect the new hardware.



Wi-Fire Connection Manger

SSID The SSID is the unique name shared among all points in your wireless network.

The name must be identical for all devices and points attempting to connect to the same network.

- No WEP key
- With WEP key
- Hidden Network

