

Point-to-Point WiFi Bridge Kit

Important Information

Please keep this document in a safe and secure location.

Resetting the Bridge Device

Warning: DO NOT RESET UNLESS COMPLETELY NECESSARY

Using the reset function will clear all of the C. Crane preset settings. Following a reset, each Bridge device will need to be reconfigured. The Reset Button is located near the ethernet cable connection on both the "Host" and the "Client" Bridge devices. With the power on, hold down the "Reset" button for approximately 30 seconds or until the lights flash.

To reconfigure your Bridge device, visit: <http://www.ubnt.com/wiki> and select the topic titled "Bridging two locations using two UBNT devices".

NOTE: C. Crane has configured devices for bridge use only. Any other type of setup configuration will not be supported by C. Crane.

Bridge Fallback IP Address: 192.168.1.20

Bridge User Name: ubnt

Bridge Password: ubnt