


CC SHORTWAVE REEL ANTENNA INSTRUCTIONS

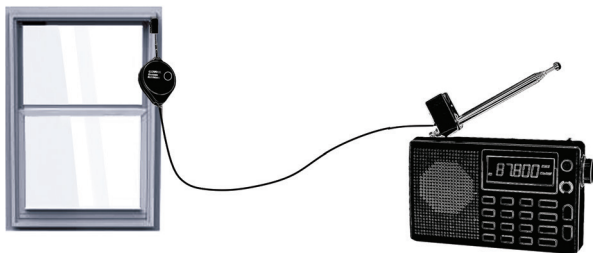

- 1. Attach the clip to the telescoping antenna of your radio.**
- 2. Fully extend the wire.**
- 3. Place the wire high off the floor, next to a window.**

Tip: Sometimes attaching the antenna near the bottom of the telescoping antenna produces the best results.

C.CRANE

172 Main Street
Fortuna, CA 95540-1816
1-800-522-8863 | ccrane.com

Copyright © 2024 C.Crane
All Rights Reserved. (Ver 2)